


ProChip FLEX Manager layout

Available and more information on <http://flex.mylaps.com>

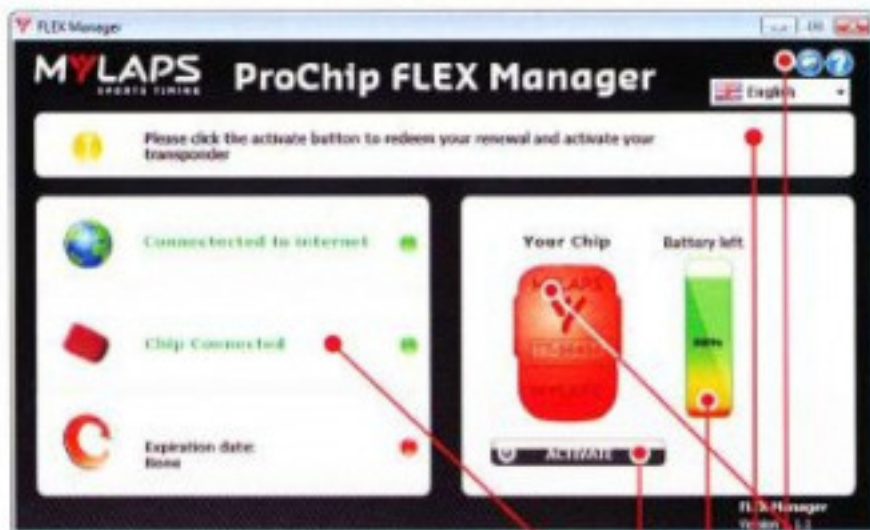

Instructions

Diagnostics: hover your mouse over these objects for more info

Activate button: activate your chip

Battery status: see how much you have left on your battery charge

Notifications: change how MYLAPS will send you notifications when your subscription is about to expire.

On the ProChip; LED for USB connection, battery status and subscription indication

NOTE: The ProChip Flex transponder is compatible with USB 2.0 Full Speed

How to activate your ProChip FLEX using FLEX Manager

STEP 1

Connect the ProChip FLEX via USB to your computer. Download the software from: <http://flex.mylaps.com>

STEP 2

Install the software. The software installs the ProChip FLEX Manager and the necessary USB drivers.

STEP 3

Start the ProChip FLEX Manager. The software will automatically try to find the connected ProChip FLEX.

FINAL STEP

Activate your ProChip FLEX Transponder by pressing the **Activate button** in the software.

LED indication ProChip FLEX



- Subscription status and battery status check
- Shake the chip for around 10 seconds
- Place the ProChip Flex on a completely stationary surface for 10 seconds
- Chip will give you 2 blinks:

First blink: Subscription

- ✓ Green: Subscription OK
- ✗ Red: Subscription expired

Second blink: battery status

- ✓ Green: Battery OK
- ✗ Red: Battery low